


Windows 7 configuration for using USB boards of Capitol and Forum consoles.

1. Access to Windows sound control panel, by writing “sound” in Start menu.

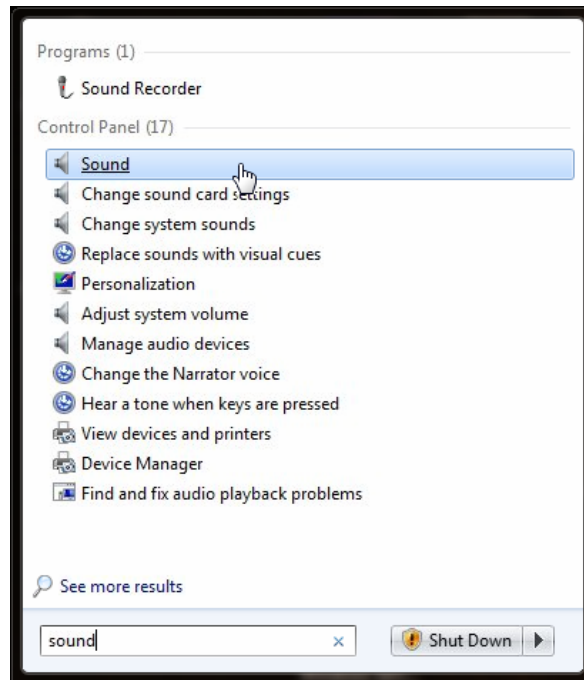


2. On board audio output (described as “Speakers USB Audio CODEC”), right-click on the board and select “Properties”.




3. Then go to “Advanced” tab and change the default format to “16 bit, 48000 Hz (DVD Quality)”. “Apply” changes and “OK”.



4. On board audio input (described as “Microphone USB Audio CODEC”), right-click on the board and select “Properties”.

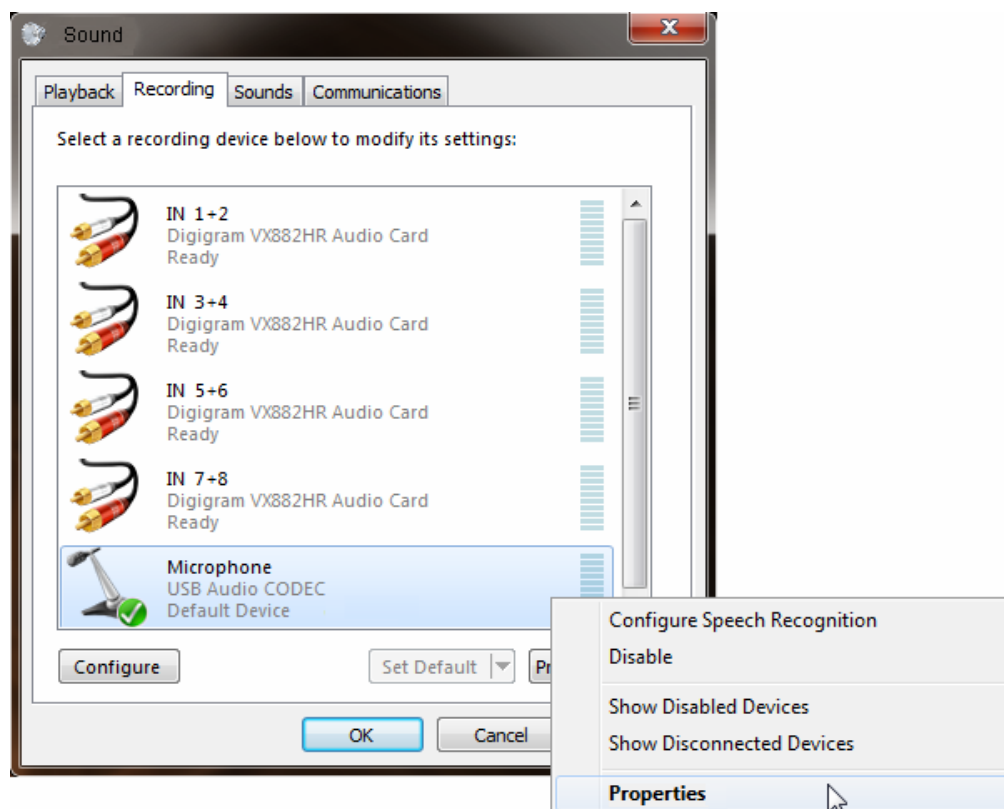

5. Then go to “Advanced” tab and change the default format to “1 channel, 16 bit, 48000 Hz (DVD Quality)”. “Apply” changes and “OK”.

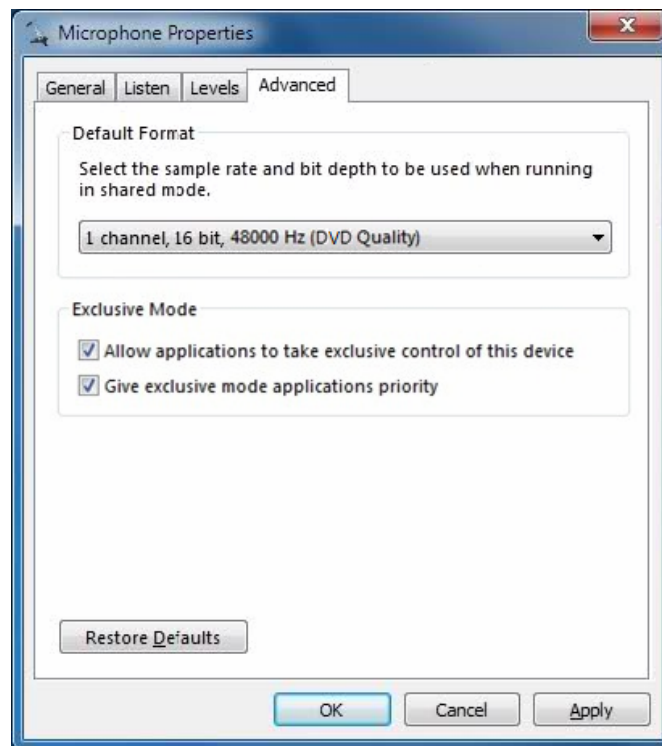

Windows XP configuration for using USB boards of Capitol and Forum consoles.


1. When you connect USB cables to console, audio drivers are automatically installed (Plug&Play). The devices are named "USB audio device".




2. Once cables are connected, verify that board is assigned as default at Windows level. In order to do that, go to taskbar, in audio control and select "Adjust audio properties" option.



3. When window is opened, check that default device is "USB Audio CODEC".

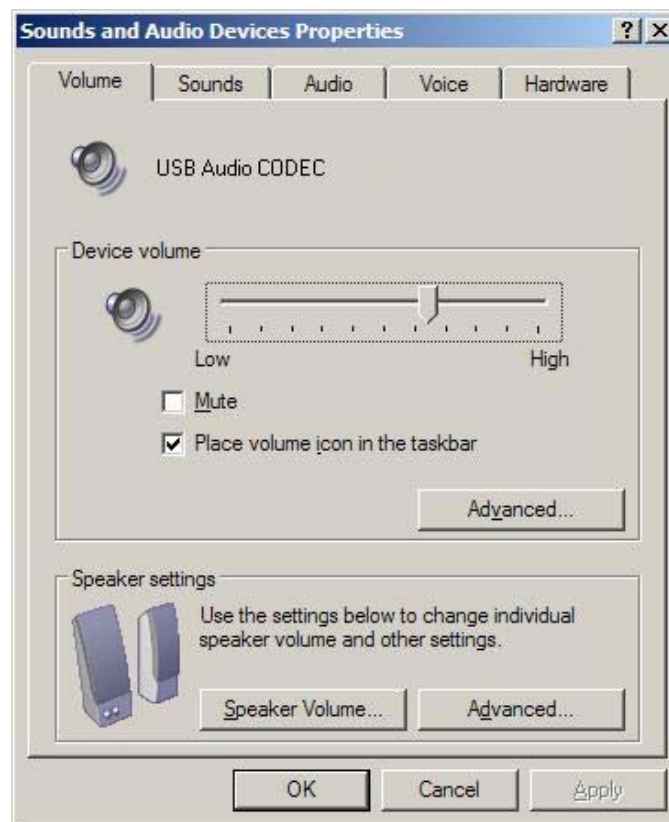


4. If not, go to “Audio” tab and select “USB Audio CODEC” device for Sound playback and recording.

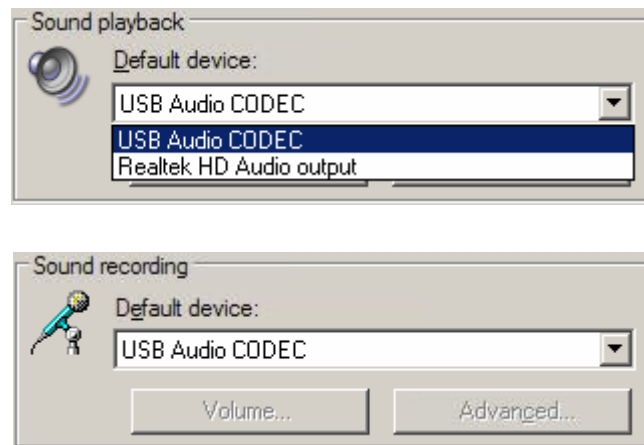

5. Once USB device is predetermined, go to taskbar, in audio control and select “Open volume control” option.



6. When window is opened, “Speaker” name will be shown and “USB Audio Codec” will appear at the bottom, that means USB device is assigned yet.

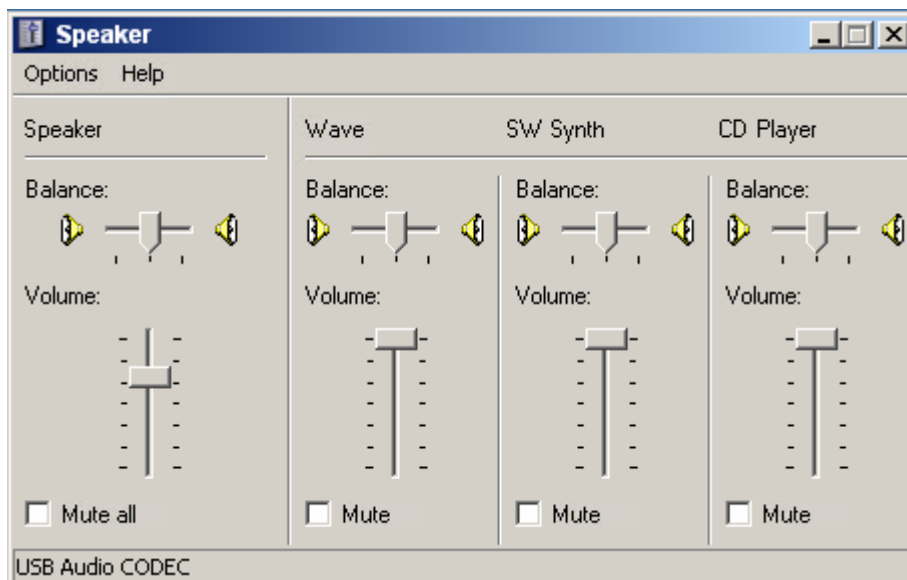

7. If you want to configure more than one board, go to “Options” menu, then “Properties”, select Mixer Device to configure and change its options.

